



PARTS LIST

Label	Qty	Description	Label	Qty	Description
1A	1	VOLUTE	14A	1	SEAL ASSEMBLY
2K	1	BACKPLATE	15A	1	RECIRC TUBING
2N	1	SEAL CAP O-RING	16A	3	PIPE PLUG
3A	1	IMPELLER	17E	1	SEAL CAP O-RING
4A	1	IMPELLER WEAR RING	20J	1	CAST IRON STAND
4F	1	CASE WEAR RING	21A	1	BRACKET
6A	1	PUMP SHAFT	22A	4	SEAL CAP STUDS
8A	1	IMPELLER SCREW	23D	2	COUPLING HALVES
8B	8	VOLUTE SCREW	24H	1	BUSHING
8D	6	BRACKET SCREW	34B	1	NAMEPLATE
8N	4	MOTOR SCREW	34F	2	COUPLING GUARD
8P	4	CPLNG SOCKET SCREW	35C	4	CPLG LOCK NUT
10A	1	IMPELLER WASHER	35F	4	SEAL CAP NUT
11A	1	VOLUTE GASKET	35R	4	MOTOR NUT
11F	1	BRACKET GASKET	61S	2	SPLIT RING
12A	1	IMPELLER KEY	65A	1	MOTOR
12B	1	COUPLING KEY			